

Service Bulletin

MACHINES/MODELS: All LX 31/41 Dual Fuel Work Platforms

SERIAL NOS.: 1000 to 1025

SERVICE BULLETIN: 96.1

DATE: 2/28/96

PURPOSE: To install three position switch in place of two position fuel selector switch. This change allows an off position to use residual fuel while changing fuel selection.

OPERATION REQUIRED: Remove existing switch operator and normally closed switch block. Replace with new three position switch operator, one new normally closed switch block and existing normally closed switch block. Rewire per instructions.


REIMBURSEMENT: Repair will take fifteen (15) minutes. UpRight will reimburse you at your normal shop rate for fifteen (15) minutes. Reimbursement will be made upon receipt of your completed warranty claim. UpRight will also pay reasonable travel mileage at \$.25 per mile.

PROCEDURE:

1. Disconnect battery negative terminal.
2. Open the electrical control box assembly and locate the fuel selector switch on inside of the cover.
3. Remove the three wires and jumper wire from the selector switch.
4. Remove contact blocks from selector switch and remove selector switch.
5. Remove the NC contact block from the carrier and replace with new NO contact block.
6. Install selector switch and contact blocks.
7. Rewire per attached drawing.
8. Connect battery negative terminal.
9. Check switch for proper operation. The middle position should shut off both fuel systems.

If you have any questions regarding this product enhancement, please contact the UpRight Service Department at (800) 926-5438, in the USA; (209) 891-5200, outside the USA; or by FAX at (209) 896-9244

Service Bulletin

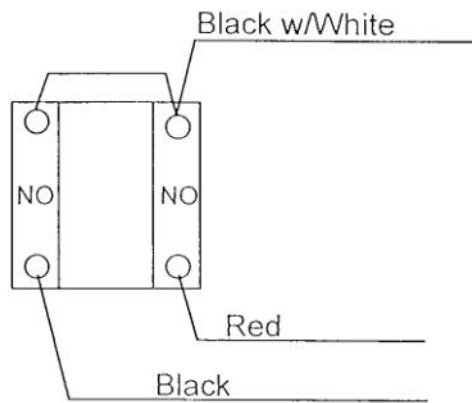

Back of fuel selector switch
Rewired with new contact block

If you have any questions regarding this product enhancement, please contact the UpRight Service Department at (800) 926-5438, in the USA; (209) 891-5200, outside the USA; or by FAX at (209) 896-9244